

**Oil
reduces
the harmful
forces of
friction.**

How does oil work?

By John S. Evans, B.Sc.

Friction is a ubiquitous part of our daily lives. Walking, writing, opening doors and drawers and driving to work all involve energy being expended in order to overcome friction. Although friction is generally thought of as a negative mechanical characteristic (approximately 20% of a car's energy is spent in overcoming friction) it must be remembered that without it we would not be able to walk and the brakes on our cars would not work.

Friction is usually seen as a mechanical problem and the force necessary to overcome it has long interested engineers. When man invented the wheel it enabled him to move weights around with far less expenditure of energy than if they were dragged from A to B. What he had in fact done was to replace sliding friction with rolling friction which has a much lower value.

This bulletin looks at the role of oil in reducing the harmful forces of friction.

FRICITION

An understanding of friction will be helpful as a starting point. Friction can be defined as the resistance encountered when one body moves relative to another body with which it is in contact.

The laws and coefficient of friction

The basic laws of friction were 'sensed' by Leonardo da Vinci but were not studied scientifically until the 18th century by Coulomb and Amontons, which led to the definition of three laws:

The first law states that the force of friction that exists between two surfaces is directly proportional to the perpendicular pressure between them. In order to slide a metal cube of mass M across a table, a tangential force, F, must be applied. If M is doubled then F must also be doubled to get M to move.

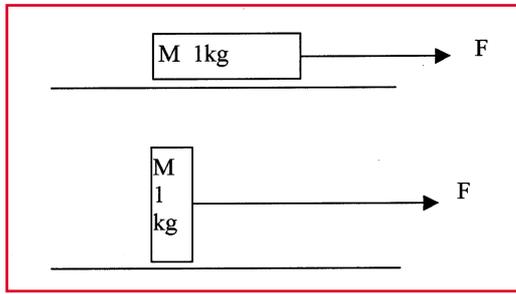


Diagram 1

Frictional drag is lower once a body is in motion.

The second law states that the force of friction is independent of the surface area of M in contact with the surface over which it is being made to slide. If M were to have an oblong cross section, it would not matter whether the larger or smaller surface area was placed on the table; the force of friction, or the force required to move both blocks, would remain the same. Diagram 1 illustrates this point.

The third law says that the force of friction is dependent on the nature and state of the surfaces. Smooth surfaces generate less friction than rough surfaces.

The first law can be restated as the ratio between F and M for a particular system is constant and F/M is known as the **coefficient** of friction. This coefficient can be easily measured by using gravity to make a metal block slide across a surface. Although the mass can be weighed and the force to get it to move easily determined, inertia causes problems.

Newton's first law of motion can

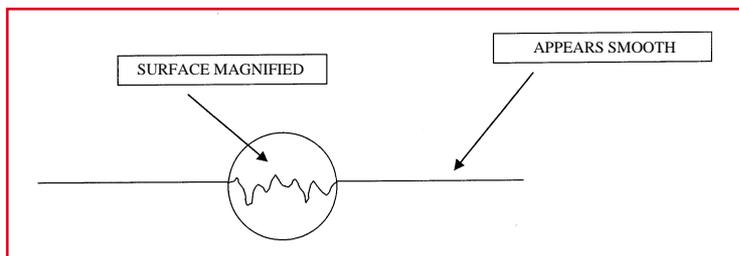


Diagram 2

be interpreted as saying that bodies at rest tend to stay that way unless acted upon. This means that the initial energy required to get the metal block to start moving (overcome static friction) is higher than the energy required to keep it moving (overcome dynamic friction). Once the initial energy has been expended to overcome the static friction, the coefficient of friction settles down to a constant value equal to the dynamic friction. Thus frictional drag is lower once a body is in motion.

Causes of friction

Surfaces that appear smooth and shiny to the naked eye will show peaks and furrows when examined with a microscope or even a magnifying glass. This does not mean that the component has been poorly machined but that components manufactured to prescribed tolerances may still have fairly rough surfaces at microscopic level (see Diagram 2).

When two surfaces are brought into contact, it is the tips of the peaks that actually touch, meaning that large areas of the surfaces never come into contact. For example, the contact area of two flat steel surfaces subjected to a pressure of 0.5 kgcm^{-2} is about 1/40 000th of the apparent surface area. The size of the contact area not only depends on the surface area and roughness but also on the load acting on the two surfaces. The peaks where contact actually takes place are called asperities.

Because it is the asperities that touch and because they make up a very small surface area, very high pressures and temperatures are achieved which can cause metal deformation and cold welding to take place. When the surfaces slide over each other, microscopic

The harmful effects of friction cannot be over-emphasised.

welds are produced between peaks which, due to the relative motion, are then torn apart.

The laws of friction apply to one clean metal surface sliding over another. The laws break down when thin metal films or oxidised surfaces are considered. They also do not apply to very hard surfaces (eg. a diamond) or very elastic surfaces (eg. rubber) where the contact area no longer depends on pressure.

Friction and wear

Whenever friction is overcome, the dislocation of surface material generates heat and this frictional heat can be highly destructive to metal surfaces and cause wear to take place.

Additionally, when there is solid friction (as opposed to fluid friction) wear will also take place. Material is lost due to the cutting action of opposing asperities and to the shearing of microscopic welds. In extreme cases the combination of high frictional temperatures, welding and shearing can cause complete seizure of moving parts.

The harmful effects of friction cannot be overemphasised. The job of the engineer and particularly the lubrication engineer is to control friction: to increase it where it is needed and to decrease it where it will cause damage. Lubrication reduces friction by replacing solid friction with fluid friction.

Sliding and rolling friction

When one body slides over another, the force of resistance encountered at the points of contact is known as **sliding friction**. If a ball or cylinder were to roll over a metal surface, the relative velocity

of the points of contact are actually zero and this results in **rolling friction**. It should, however, be noted that rolling friction is always accompanied by some sliding friction.

Two main types of rolling friction exist. The first is where large tangential forces are experienced as in the case of a car wheel in contact with the road which generates considerable sliding forces. The second is where minimal tangential forces are present as is the case with a ball or roller bearing. This is sometimes known as free rolling.

Studies show that elastic deformation of the roller and the surface occurs and this gives rise to the resistance to motion (friction) that is encountered. The energy returned to the system when the deformation returns to normal is less than the energy required to cause the deformation. This excess energy is lost as frictional heat.

Tests show that rolling friction is not influenced by the presence or absence of a lubricant. However, lubrication is still important in this situation because the elastic deformation of the surfaces introduces sliding friction which can be reduced by the introduction of a lubricant to convert solid friction into fluid friction.

LUBRICATION

The friction that exists between two bodies in relative motion involves an appreciable energy loss which needs to be minimised. This is achieved by feeding lubricants between these sliding surfaces which replace solid friction with fluid friction which can be far smaller.

A lubricant must possess two basic properties: some degree of

Tribology is the study of the interaction of surfaces in relative motion to each other.

fluidity to spread over the surfaces and adhesive power to allow the fluid to remain in place during motion. Oils are particularly well suited to this job.

When an oil is fed in between two moving surfaces it causes them to separate and in doing so eliminates the solid friction that exists between them. Unfortunately viscous drag (fluid friction) exists in the oil so that friction can never be totally eliminated but it can be greatly reduced. The oil can cause the surfaces to separate in a number of ways and, when this is not completely possible, friction is still kept to a manageable level.

The lubrication regimes that will be considered here are: boundary lubrication, mixed film lubrication and hydrodynamic lubrication which includes elastohydrodynamic lubrication (EHD).

Boundary lubrication

Three parameters need to be considered when looking at the various lubrication regimes. They are: the load placed on the surfaces, the speed at which they are moving relative to each other, and the viscosity of the lubricant.

Viscosity is a very important property of a lubricant and will be

A PRACTICAL ANALOGY - DRIVING A CAR

A USEFUL analogy when looking at the different types of lubrication is to consider a car driving along a road in different conditions.

■ When driving on a dry road, there will be maximum friction between the tyre and road surface and, if the brakes are applied, then there will be the shortest possible stopping distance with the maximum wear to the tyres (and road surface). This equates to no lubrication at all.

■ If there has been a light shower and there are puddles on the road and the brakes are applied, there is insufficient water on the road to lift the tyres off the surface but there is enough water to pool into low spots, preventing maximum contact between the surfaces. This is like boundary lubrication where braking and tyre wear will occur, but less than would occur on a dry road and with longer braking distances.

■ If there has been a downpour

and a car is driving at high speed on a flat stretch of freeway and the brakes are suddenly applied, then the wheels will lock and the car will aquaplane. This is like hydrodynamic lubrication - the tyres skim along the surface of the water without touching the road, with minimal wear to the tyres. All braking is done by the bodywork and braking distance is dependent on how quickly the bodywork comes into contact with something immovable (crashes).

■ If, under the same conditions, the car has ABS brakes then something akin to mixed film lubrication exists. The brakes and wheels are pulsed, allowing them to brake through the water surface and touch the road in short bursts. Sometimes boundary lubrication takes place, sometimes hydrodynamic. Braking distance is longer than in the case of boundary lubrication and some wear to the tyres occurs, but hopefully the car's bodywork does not come into play. ✓

Viscosity is a fluid's resistance to flow at a particular temperature.

defined at this point as a fluid's resistance to flow at a particular temperature. Fluids that have high viscosities do not flow easily (such as molasses) - high viscosity oils are sometimes referred to as 'thick' oils. Fluids with low viscosities flow easily (such as water) - low viscosity oils are sometimes referred to as 'thin' oils.

It is important to remember that when an oil is heated up, its viscosity will decrease. In other words, it will 'thin out'. Likewise the viscosity will increase as the temperature decreases and the oil will 'thicken up'. Because of this an oil's viscosity must always be accompanied by the temperature at which the measurement was made for it to mean anything.

In a situation for ideal lubrication the viscosity and the speed should be high and the load low. If this were always the case then lubricated surfaces would always be separated and only fluid friction would come into play. Unfortunately we do not live in an ideal world and this is not always possible.

In the case of a plain bearing and a journal there will be a small amount of lubricant between the mating surfaces. However, because of the load and zero speed on start up, the lubricant film will not completely separate the bearing from the journal. In this situation the asperities will break through the lubricant film and make contact; this is known as **boundary lubrication**. All is not lost, however, and the situation is far better than if no oil were present at all. Typically, the coefficient of friction of unlubricated metal surfaces ranges between 1.5 and 0.5. With boundary lubrication it is between 0.1 and 0.02.

Boundary lubrication can be subdivided into: oily lubrication, antiwear lubrication and EP (extreme pressure) lubrication.

1. Oily lubrication takes place through two distinct mechanisms:

■ Physical adsorption, whereby oil molecules and compounds blended into the oil are attracted electrostatically to metal surfaces and form bimolecular layers due to the polar nature of these compounds.

■ A chemical reaction also takes place causing certain compounds in the oil to attach themselves chemically to the metal surfaces. This allows very thin films, usually only one or two molecules thick, to form and help reduce friction whilst not totally separating the metal surfaces (see Diagram 3).

2. Antiwear lubrication occurs because of the presence of chemical compounds in the oil that are specifically designed to react with metal surfaces and form a protective layer. The melting point of these compounds is fairly low and is below the temperature at which EP compounds are effective. Antiwear additives are sometimes referred to as mild EP additives.

3. EP lubrication is required where high pressures and hence high temperatures are encountered. This is achieved by the addition of compounds that contain phosphorus and sulphur that react with the metal surfaces to form compounds such as iron sulphide which has a high melting point and low shear strength. In other words, they make the metal surfaces slippery.

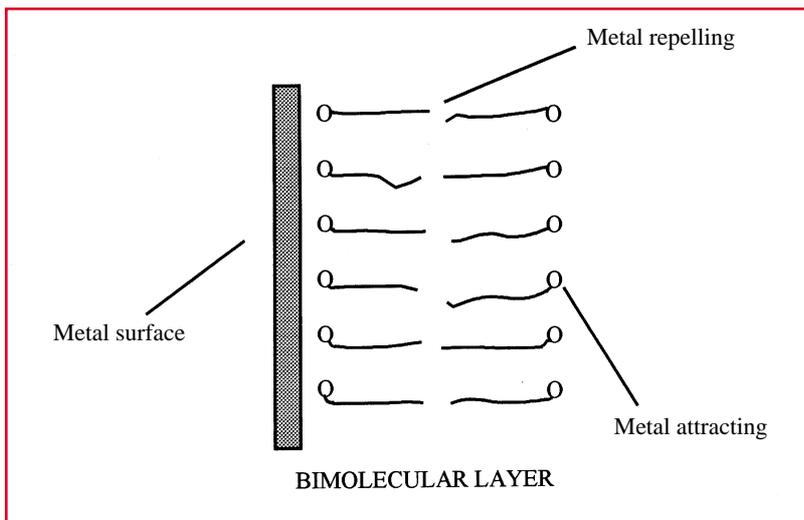


Diagram 3

Fluid friction increases as speed increases.

Mixed film lubrication

The coefficient of friction in a plain bearing is related to the load on the bearing, the speed at which it is turning and the viscosity of the oil that is lubricating the system.

Assuming the viscosity remains constant throughout (as will the load) then the coefficient of friction will vary with the change in speed. On start-up the speed is low (zero) so that the coefficient of friction will be high but will decrease as the speed increases. The graph below illustrates the relationship where initially the

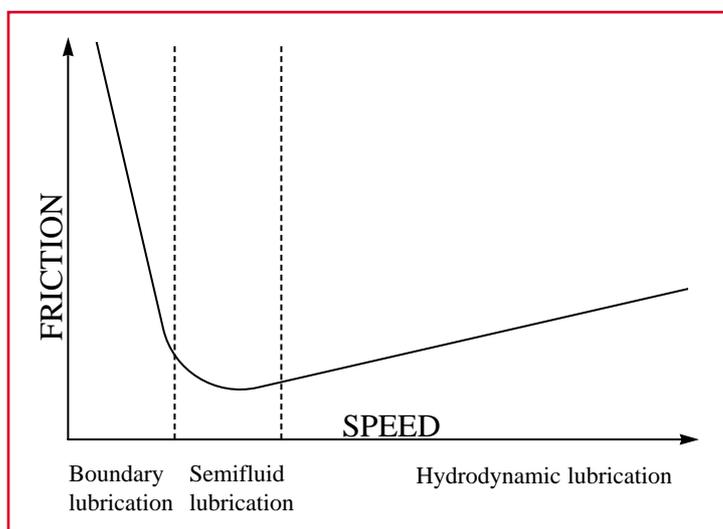


Diagram 4

solid friction is very high but is gradually replaced with fluid friction as the journal begins to turn. Mixed film lubrication occurs when boundary lubrication is reduced but the mating surfaces are not quite separated and are supported by a full film of lubricant (see Diagram 4).

Hydrodynamic lubrication

In theory the journal should be located coaxially with the bearing. However, in practice, this does not happen unless the load is extremely small or the shaft is mounted vertically. In practical cases there is an appreciable load on the oil film and the journal cannot rotate coaxially to the bearing.

As speed increases a wedge is formed between the converging surfaces through which the oil is forced as it is entrained by the rotating shaft. At this point the fluid has a greater velocity, and hydrodynamic pressure is created which counterbalances the load and keeps the mating surfaces apart.

Under this type of lubrication regime the coefficient of friction is reduced to the order of 0.005. It will be noted from the graph that the minimum friction is achieved just before the onset of hydrodynamic lubrication. It is at this point that solid or static friction is replaced by fluid or kinematic friction. Unlike solid friction, fluid friction is dependant on speed and gradually increases as the speed increases.

Elastohydrodynamic lubrication (EHD)

The surfaces in relative motion that require lubrication that have been considered so far have had the same geometry, that is they fit together like two spoons. In the

Pressure is defined as force over area.

case of a ball or roller bearing, the contact area between the mating surfaces is vanishingly small. With a ball bearing in a race, the area of contact is a tangential point and, with a roller bearing, a tangential line. Remember that pressure is defined as force over area and in this situation the area is very small. With normal loads in roller elements, pressures of 1.5 Gpa (1,5 million kilopascals) can be reached. Under these conditions both the roller elements and the oil behave in a non-Newtonian fashion (see Newtonian fluids section on back page).

These high pressures are known as

Hertzian pressures and the point or line of contact of the roller is known as the Hertzian region. These high pressures cause both the roller and the race to elastically deform to a small degree which spreads the pressure over a small but finite area. Oil is drawn into the Hertzian region by hydrodynamic forces and when subjected to these Hertzian pressures the viscosity increases (reversibly) dramatically and has the consistency of window putty. It is this increase in viscosity that enables the oil to lubricate under these extreme conditions and this lubrication regime is known as elastohydrodynamic lubrication. ✓

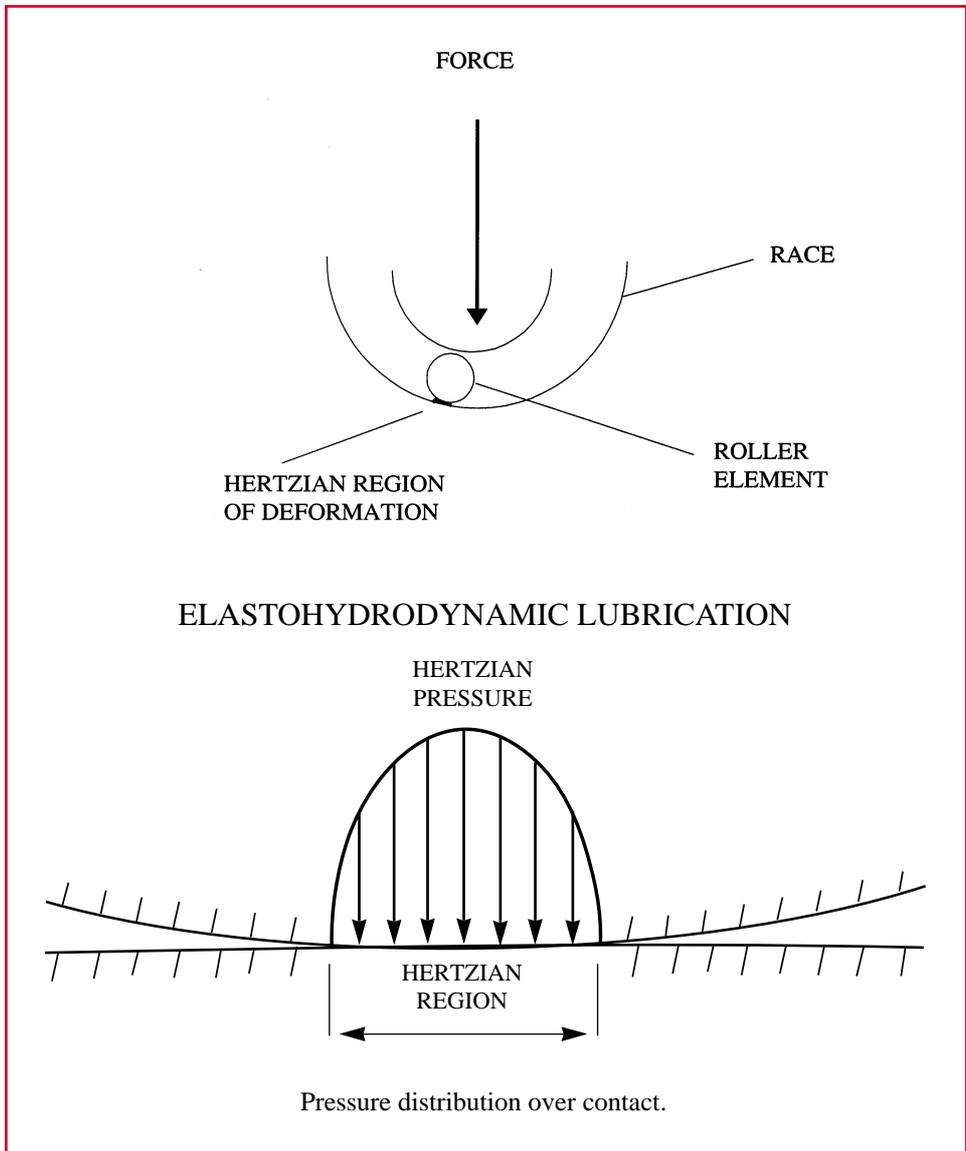



Diagram 5

**Lubricants
convert
solid friction
into
fluid friction.**

NEWTONIAN FLUIDS

NEWTONIAN fluids (including lubricating oils) behave in the following way: Consider any fluid between two parallel plates of area A and separated by a distance H . One plate is held fixed whilst the other moves with velocity V . As it moves it carries the layer of fluid touching it, which in turn carries along the layer of fluid closest to it and so on. The layer of fluid adjacent to the stationary plate will also be stationary so that the velocity of the different layers of fluid will vary between 0 and V if there is laminar flow. The force required to cause this flow is given by the following equation:

$$F = \eta AV/H$$

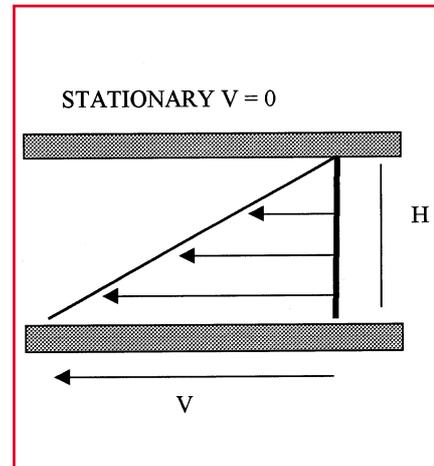

The constant of proportionality (η) is the viscosity of the fluid and represents the resistance to flow at a particular temperature. It is dependant on the nature of the fluid and the temperature only. ✓

John Evans is the diagnostic manager: mobile equipment for the Wearcheck Division of Set Point Technology.

*Copies of previous Technical Bulletins can be accessed on Wearcheck's web site:
www.wearcheck.co.za.*

Readers who would prefer to receive future issues of Wearcheck Technical Bulletin and Monitor via e-mail instead of in printed form, please e-mail a request to:
support@wearcheck.co.za.

Publications are welcome to reproduce this article or extracts from it, providing the Wearcheck Division of Set Point Technology is acknowledged.

**Produced by the
Wearcheck Division of
Set Point Technology**

KWAZULU-NATAL
9 Le Mans Place, Westmead
P.O. Box 15108, Westmead, 3608.
Tel: (031) 700-5460
Fax: (031) 700-5471
E-mail: support@wearcheck.co.za

GAUTENG
25 San Croy Office Park,
Die Agora Road
(off Brabazon Road), Croydon.
P.O. Box 284, Isando, 1600
Tel: (011) 392-6322
Fax: (011) 392-6340
E-mail:
jhbsupport@wearcheck.co.za

INTERNET SITE :
<http://www.wearcheck.co.za>